



T - 856-232-4700  
F - 856-232-7533

1651 Sicklerville Rd.  
Sicklerville NJ 08081  
[www.PreferredPartyPlace.com](http://www.PreferredPartyPlace.com)

## Pretzel Oven / Warmer Combo Unit

### OPERATING INSTRUCTIONS

#### CONTROLS AND THEIR FUNCTIONS

##### WARMER LIGHT SWITCH

Flipping this switch to the "ON" position energizes the light and rotisserie motor. Note: The rotisserie will only function with the door closed

##### WARMER HEAT SWITCH

Flipping this switch to the "ON" position energizes the heat element in the warmer portion of the cabinet. Note: The heat element is controlled by the warmer temperature control.

##### WARMER TEMPERATURE CONTROL

The machine comes with a variable heat control. The control is graduated from OFF to 170. The proper setting of this control will depend on the temperature of the items being placed inside and how many times the door is opened.

##### OVEN HEAT SWITCH

Flipping this switch to the "ON" position energizes the oven heat element. Note: The oven heat element is controlled by a 425 deg. thermostat in the oven.

##### OVEN TIMER SWITCH

Flipping this switch to the "ON" position energizes the timer circuit. Note: The amount of time required is set by the timer control.

##### TIMER CONTROL

This control set the amount of time before the buzzer sounds. Set the time on the dial, then turn on the timer. The buzzer will sound when the allotted time has expired.

### EASY STEPS FOR USING UNIT

1. Prepare Warmer Section for operation
  - a. Fill the water pan in warmer section of machine to provide humidity as needed
  - b. Turn heat switch to on position
  - c. Turn heat control to 170 DEG. F and preheat unit approximately 2 hours.
  - d. Turn temperature control to 170 DEG. F to maintain 150 DEG. F product temperature.
  - e. Load food products when preheat is complete. If loading pizza, place in cabinet straight from cooking oven.
  - f. Turn on light switch for light and rotating rack if equipped.
2. Prepare Oven Section for operation
  - a. Turn oven heat switch to on position
  - b. Pre heat oven for ½ hour or until oven pilot light goes out.